

IRIDIUM



Stage Panel Light 200W **DMX RGBWW**

Product Code: 113781

CONTENT

1. Introduction	4
2. Safety instructions	4
Proper Use	
Care	
3. Description	4
Products features	
Overview	
4. Installation	5
Overhead rigging	
DMX512 connection	
Power Input	
5. Operation	6
Control board	
DMX modes	
6. Replacing the fuse	7
7. Technical specification	7

1. Introduction

Dear customer, thank you for deciding to purchase our product. The product fulfils the requirements of effective European and national guidelines. To maintain the condition of the product and to ensure safe operation, you - as the user - must observe the product notes and the operation manual!

They contain important information for the start-up and handling. It is important, therefore, that these documents are archived carefully for referring to information at a later stage.

2. Safety Instructions

We are not responsible for any property damage or personal injury caused by failure to observe these product notes and manual, improper handling or unauthorised modifications.

It can only be installed by a qualified electrician. Make sure that the item has not been damaged during transport before putting the light into operation. It may not be operated if there are any damages to electrical parts. The luminaire may only be operated completely with its protective cover. It may only be operated once removed from the packaging. The type plate must not be removed.

The connection lines in the building must be disconnected before installation and secured against being switched back on. For this, trip the corresponding fuse switch in the building installation.

Make sure the electrical specifications for the connection lines correspond with the specifications given on the nameplate of this product. We recommend that you protect the product with a residual-current-operated protective device.

Follow all installation regulations applicable at your location. Make sure that the cables and plugs are not subject to tension or torsional forces and do not bend the cables. Protect all cables and insulation against possible damages. Output lines should be laid separately and spaced apart from other lines. The power supply cables and the lamp feeders must not cross each other. Do not allow the product to come into contact with extreme heat or naked flames. Use the supplied fastening material only when it is suited for the installation background. The product must not be covered with objects (decorations) or thermally insulating coverings /similar materials. Before disposal of the packaging material make sure that all components are removed. Keep packaging material away from the reach of children and pets. The packaging contains small parts that may be swallowed by children.

Proper Use

This product is only intended for lighting purposes and may only be operated on normal or non-flammable surfaces. The use can be done in indoor/outdoor areas.


Make sure that the surface is suitable for permanently and reliably taking the weight of the light.

Care

Repairs may only be carried out by a qualified electrician. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard. Disconnect the entire product from the mains first and allow it to cool down before cleaning or maintaining. Use a dry or slightly moistened cloth for cleaning. Never use any chemicals, flammable cleaning agents or abrasives. These may cause damage to the surface coating and/or the insulators.

3. Description

- Material material, good performance of cooling system
- Ultra slim
- DMX controlled operation, possible work with any commercial DMX512 controller
- Different dimmer curves and dimmer speed adjustable
- Flicker free projection
- Color filter optional
- Ready for connection with power cord with safety-plug

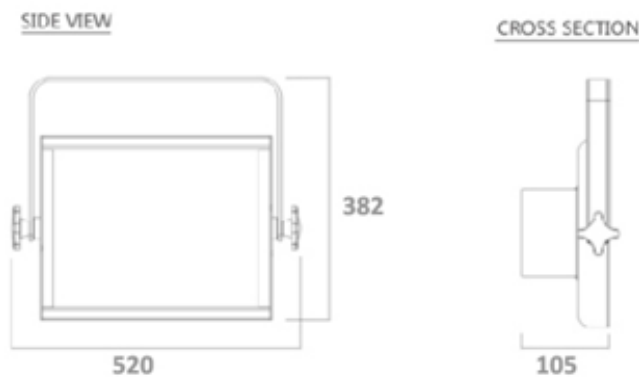

4. Installation

This device can be mounted in many orientations provided each individual device is secured by the use of correct mounting bracket.

Overhead rigging

The installation of the device has to be built and constructed in a way that it can hold 10 times the weight for 1hour without any harming deformation. The installation must always be secured with a secondary safety attachment. This secondary safety attachment must be constructed in a way that no part of the installation can fall down if the main attachment fails. The operator has to make sure that safety-relating and machine-technical installations are approved by an expert and before taking into operation for the first time and after changes .

Please note: for overhead rigging in public or industrial areas, a series of safety instructions have to be followed that this manual can only give in part.

DMX512 connection

If you are using controllers with this occupation, you can connect the DMX output of the controller directly with the DMX input of the first fixture in the DMX chain.

Building a serial DMX chain: Connect the DMX output of the first fixture in the DMX chain with the DMX input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.

For better signal receival, a signal amplifier suggest to be used for each 20 fixtures.

Power input

This device has an auto-switching power supply work with input voltage range of 100-230V AC, 50/60Hz. Link up to the maximum 8A, Do not exceed this.

5. Operation

Control board



Press the Menu until one of the following had been displayed:

Menu			
Menu 1	Menu 2	Value	Description
DMX	Addr.	1-512	DMX512 address
CHAN	6CH		Refer Channel table
	7CH		
	6HCH		
	12CH		
STAT	R	0 - 255	Red dimming
	G	0 - 255	Green dimming
	B	0 - 255	Blue dimming
	W	0 - 255	White color dimming
	CCT	0 - 255	Color temperature changing
FADE	ON/OFF		Fade time
CURVE	LINEAR		
	LOG		
	S-CURVE		
TEMP	XXX		Current Temperature
RESET	YES/NO		Reset
VERSION	VERSION	F109.1	version

Use 'Up' and 'Down' button to select your desired operation, press 'Enter' to set all function

Notes:

- » When there's a flickering '!' sign appeared, means no signal input for the fixture.
- » No operation within 30seconds, LCD display will enter into Screen protection mode automatic.
- » When the current temperature is higher than the protecting setting temperature, 30% of power consumption will be deducted slowly; Power consumption will be coming to normal when the temperature gets to normal.

DMX Modes

DMX512 Channel table

Channel				Value	Description
6	7	6H-CH	12		
1	1	1	1	000 - 255	Master dimming
			2	000 - 255	Master dimming fine
2	2		3	000 - 255	Red
			4	000 - 255	Red fine
3	3		5	000 - 255	Green
			6	000 - 255	Green fine
4	4		7	000 - 255	Blue
			8	000 - 255	Blue fine
5	5		9	000 - 255	White
			10	000 - 255	White fine
		2		000 - 255	Hue
		3		000 - 255	Hue fine
		4		000 - 255	Staturation
6	6	5	11	000 - 255	Color temperature 3200K - 5700K
	7	6	12		Strobe
				000 - 005	No function
				006 - 255	Strobe slow to fast

6. Fuse Replacement

If the fine-wire fuse of the device fuses, only replace the fuse by a fuse of same type and rating. Before replacing the fuse, unplug mains lead.

Procedure:

Step1: Unscrew the fuse holder on the rear panel with a fitting screwdriver from the housing (anticlockwise).

Step 2: Remove the old fuse from the fuse holder.

Step 3: Install the new fuse in the fuse holder.

Step 4: Replace the fuse holder in the housing and fix it.

7. Technical specifications

Power Consumption:	250W full on
Voltage:	100 - 240V AC
Frequency:	50/60Hz
Light Source:	RGB, Warm White, Cool White SMD LED
Lens:	Matrix compound eye optical system
Color temperature:	3200K~ 5700K adjustable
CRI:	>90
Beam Angle:	120°
Dimming Range:	16bit smooth dimming 0-100%
DMX Channel:	6CH/7CH/6HCH/12CH
Control system:	STM32 control chip, DMX512 signal
Display Screen:	4-Button LCD Screen
IP Rating:	IP20
Ambient Temp.:	-15°C - 35°C
Product size:	520 x 382 x 105 mm
Weight:	7.4 kg